



NEWFANE MEDIA CREDENZA ASSEMBLY

Base Part Location and Verification

Location	Quantity	Description	QC Check
	1	Case Unit	
	2	Leg Assembly	
	6	Wood Shelves	

Hardware List and Verification

Quantity	Description	QC Check
6	1" Lag Bolts	
6	Flat Washers	
24	Shelf Pins	

ASSEMBLY INSTRUCTIONS:

- 1) TURN THE CASE UNIT UPSIDE DOWN ON A SOFT, NON-ABRASIVE SURFACE WITH PRE-DRILLED HOLES FACING UP.
- 2) LINE UP THE 3 HOLES IN THE LEG ASSEMBLY PLATE WITH THE 3 PRE-DRILLED HOLES IN THE BOTTOM OF THE CASE UNIT. SEE *FIGURE 1*.
- 3) BOLT THE LEG ASSEMBLY PLATE TO THE BOTTOM OF THE CASE UNIT USING THE 1" LAGS. **IMPORTANT: DO NOT USE POWER TOOLS.** WHEN FINISHED, THE LEGS SHOULD LOOK LIKE *FIGURE 2*.
- 4) [2 PEOPLE NECESSARY FOR THIS STEP] LIFT AND TURN THE CASE UNIT RIGHT-SIDE UP.

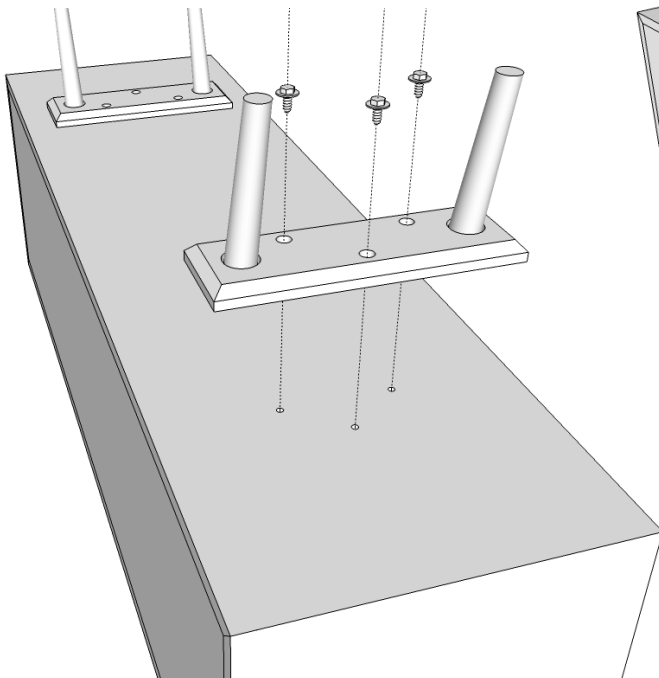


FIGURE 1

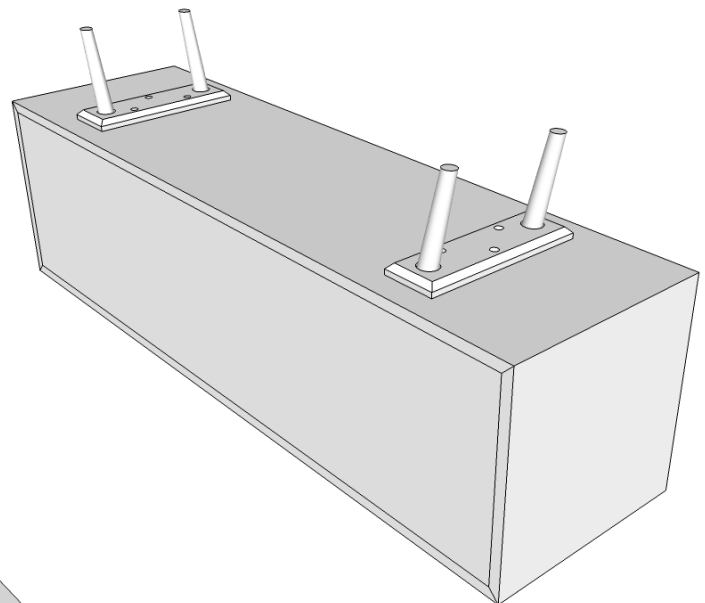


FIGURE 2