



BROOKLINE LATTICED BOOKCASE WALL ANCHORING

Hardware List and Verification

Quantity	Description	QC Check
20	2" Lag Bolts	
5	2 1/2" Lag Bolts	
25	Flat Washers	
5	3 1/2" Screws	
6 (1 Spare)	Wood Plugs	



QUALITY CONTROL CHECK PERFORMED BY: _____

ATTENTION  **Do Not Assemble with Power Tools**

ASSEMBLY INSTRUCTIONS:

- 1) ATTACH ALL FIVE VERTICAL SLAT, PRE-DRILLED UPRIGHTS TO FITTED SLOTS ON ALL FOUR SHELVES USING THE **20 - 2" LAGS**.
- 2) ATTACH **1 3/4"** BASE TO ALL FIVE VERTICAL SLATS USING THE **5 - 2 1/2" LAGS**.
- 3) USE THE **5 - 3 1/2" SCREWS** TO ANCHOR UNIT TO THE WALL.
- 4) PLUG DRYWALL SCREW HOLES WITH WOODEN PLUGS.

THE FACTORY SUPPLIED HOLES ARE PROVIDED TO WORK WITH STANDARD WALL STUD SPACING. IF THE SUPPLIED HOLES DO NOT LINE UP WITH YOUR APPLICATION, ADDITIONAL HOLES WILL NEED TO BE DRILLED TO LINE UP WITH YOUR PARTICULAR STUD ALIGNMENT. THE NARROW STANCE OF THIS UNIT REDUCES ITS STABILITY. IT IS CRITICAL THAT IT IS SECURELY ANCHORED TO WALL STUDS TO INSURE SAFETY.

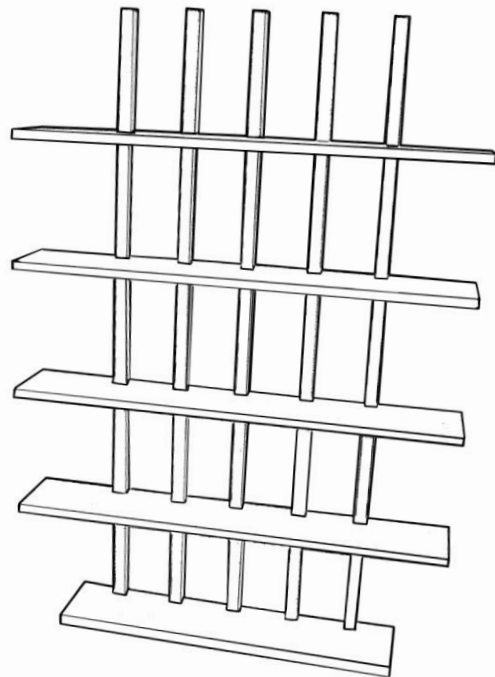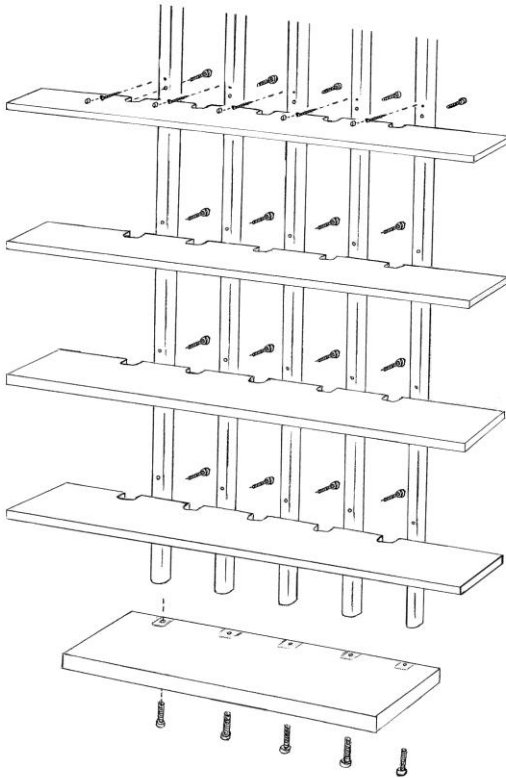

Assemble and securely anchor storage wall unit to a solid or reinforced wall as shown. Failure to do so could cause instability and injury.

PROPER ANCHORING OF THE UNIT IS THE RESPONSIBILITY OF THE CONSUMER.