



VERGENNES TABLE ASSEMBLY

Base Part Location and Verification

Location	Quantity	Description	QC Check
Base Box	2	Metal Legs	

Hardware List and Verification

Quantity	Description	QC Check
16	1" Lag Bolts	
16	Flat Washers	

QUALITY CONTROL CHECK PERFORMED BY: _____

ATTENTION  **Do Not Assemble with Power Tools**

ASSEMBLY INSTRUCTIONS:

- 1) TURN THE TABLE UPSIDE DOWN AND PLACE ON A SOFT, NON-ABRASIVE SURFACE.
- 2) THERE ARE 2 SETS OF HOLES PRE-DRILLED IN THE BOTTOM OF THE TABLE (SEE *FIGURE 1*). ONE SET OPTIMIZES SEATING ON THE ENDS OF THE TABLE (*FIGURE 2*) AND THE OTHER OPTIMIZES SEATING BETWEEN THE BASES ON THE SIDES OF THE TABLE (*FIGURE 3*). **CHOOSE WHICH LOOK WORKS BEST FOR YOU BEFORE ATTACHING LEGS.**
- 3) ALIGN THE HOLES IN THE LEGS WITH THE SET OF HOLES FOR LOOK YOU CHOSE. FIRMLY ATTACH THE BASE TO THE TABLE USING THE **16 - 1" LAG BOLTS**.

NOTE: IF YOU DECIDE TO CHANGE WHICH LOOK YOU WANT, KEEP IN MIND THAT ATTACHING AND REMOVING THE LAG BOLTS MORE THAN TWICE MAY STRIP OUT THE HOLES THAT WILL MAKE THE ATTACHMENT LESS SECURE.

FIGURE 1

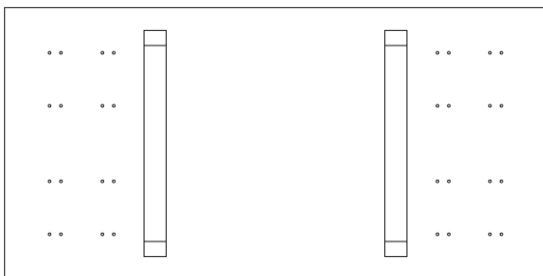


FIGURE 2

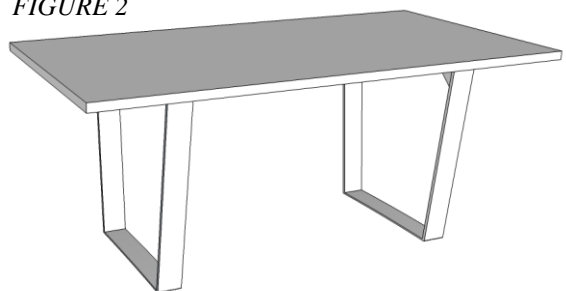


FIGURE 3

